Button Layout

Easy to Navigate Menu's

1. To navigate around the menus use the volume up and down buttons and the soft keys just below the screen.

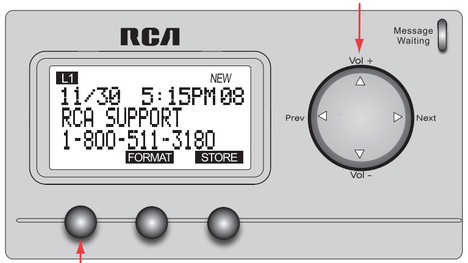

To choose a soft key option, press the button directly under that part of the screen.

Note: The Prev and Next buttons on the left and right are also used in menus to switch between some options.

quick start guide

25260

RCA ViSYS™

For Customer Assistance call 1-800-511-3180

RCA is a trademark of RCA Trademark Management S.A., used under license.

Storing Phone Numbers

1. To make a one touch dial press STORE.
2. Press the one touch button to be programmed.
3. Use the keypad to enter the name for this contact. This is done the same way names can be entered into cell phones. Press SAVE.
4. Enter the phone number and press OK.

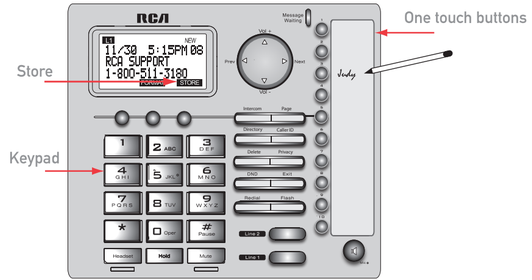

Wirelessly connecting your 25260 to another RCA phone:

First, make sure your 25260 is in EXT/WIRELESS mode by going into the SELECT MODE menu and choosing EXT/WIRELESS. Your phone will switch over to wireless mode and will be ready to register to another wired RCA phone.

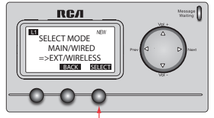

When your 25260 is in EXT/WIRELESS mode, there's no need for a phase jack! It connects to your phone system wirelessly.

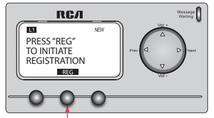

When you are ready to begin pairing your phones, press the REG soft key.

NOTE : Before you begin pairing your phones together, you may wish to set them up in the same room. This will make accessing both phones easier. But don't worry, you can unplug and move either phone afterwards.

If you have a 25255RE2 or 25270RE3:

While your 25260 display says "REGISTERING…" press and hold the PAGE button on your 25255RE2 or 25270RE3 desk phone for 5 seconds. Your phones will automatically detect each other and be ready to use in seconds!

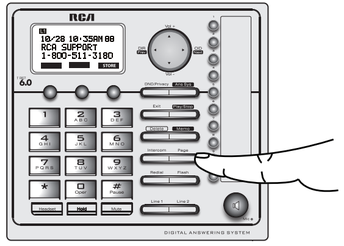

If registration was successful, the LCD on the base phone will read REGISTRATION COMPLETE!

If registration fails, try moving the phones closer together and try again.

If you have a 25210RE1, 25250RE1, 25212 or 25252:

While your 25260 display says "REGISTERING…" press and hold the PAGE button on your 25210RE1, 25250RE1, 25212 or 25252 base for 2 seconds. Your phones will automatically detect each other and be ready to use in seconds!

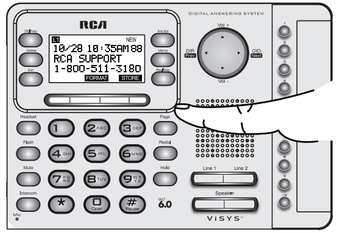

If registration was successful, the LCD on the base phone will read REGISTRATION COMPLETE!

If registration fails, try moving the phones closer together and try again.

If you are wirelessly connecting to another 25260:

While your 25260 display says "REGISTERING…" press and hold the PAGE MAIN button on the 25260 for 5 seconds. Your phones will automatically detect each other and be ready to use in seconds!

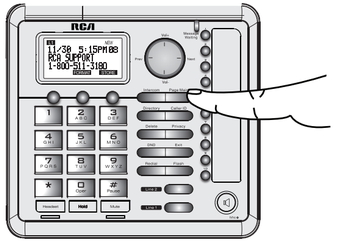

NOTE: To connect two 25260 phones wirelessly, one of them must be operating in MAIN/WIRED mode and be connected to a phone jack.

If registration was successful, the LCD on the base phone will read REGISTRATION COMPLETE!

If registration fails, try moving the phones closer together and try again.